


**KWI** X **WHALEN**  
CLUTCHING SPEED  
**THERMOSTAT DELETE**



**PACKAGE INCULDES:**  
**1 T-CONNECTOR**  
**1 90° CONNECTOR**  
**4 LARGE OETIKER CLAMPS**  
**1 SMALL OETIKER CLAMPS**

**1. Drain coolant**

**2. Access thermostat housing behind firewall as required and remove all oetiker clamps**

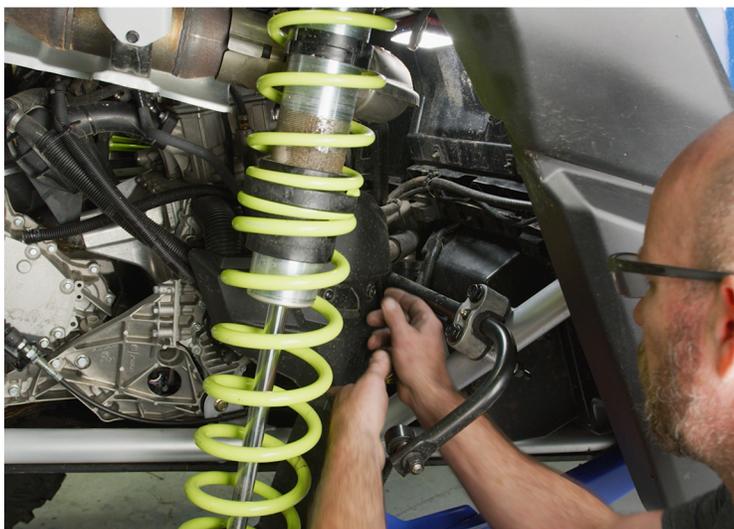


**3. Label hoses to ensure proper routing**




**4. Remove 4 main hoses and coolant tank small hose, remove thermostat housing, vertical hose and upper T fitting and discard.**



**5. Connect hoses per the attached drawing**

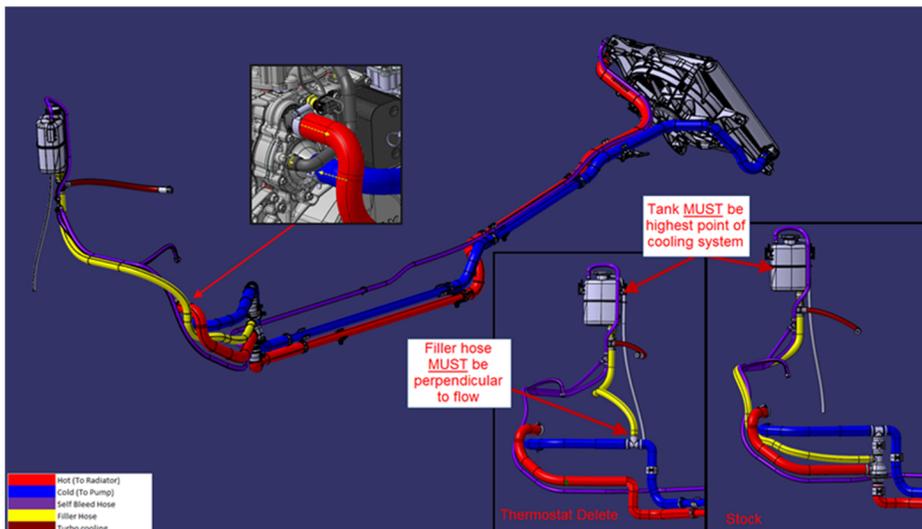

**6. Crimp oetiker clamps using oetiker pliers.**


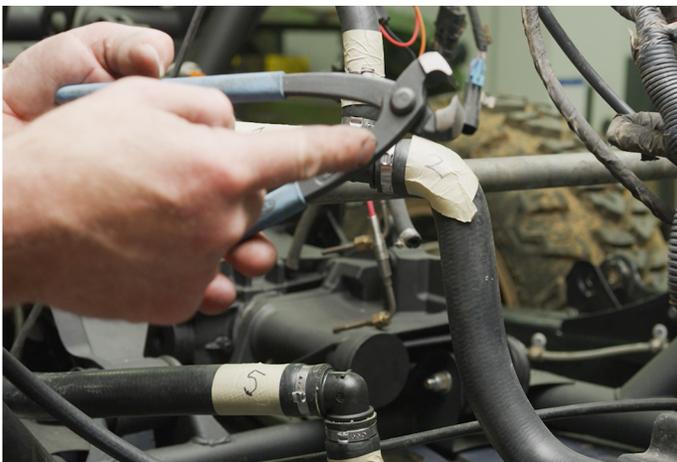


**7. Fill cooling system with proper coolant mixture and bleed/top up system until all air is removed and coolant reservoir is at the proper level.**





***KWICLUTCHING.COM***

***WHALENSPEED.COM***

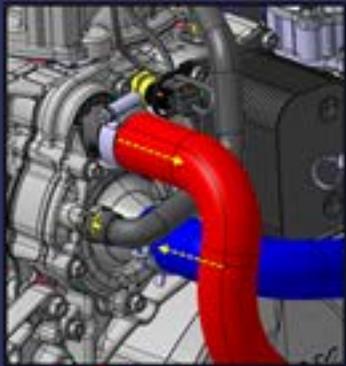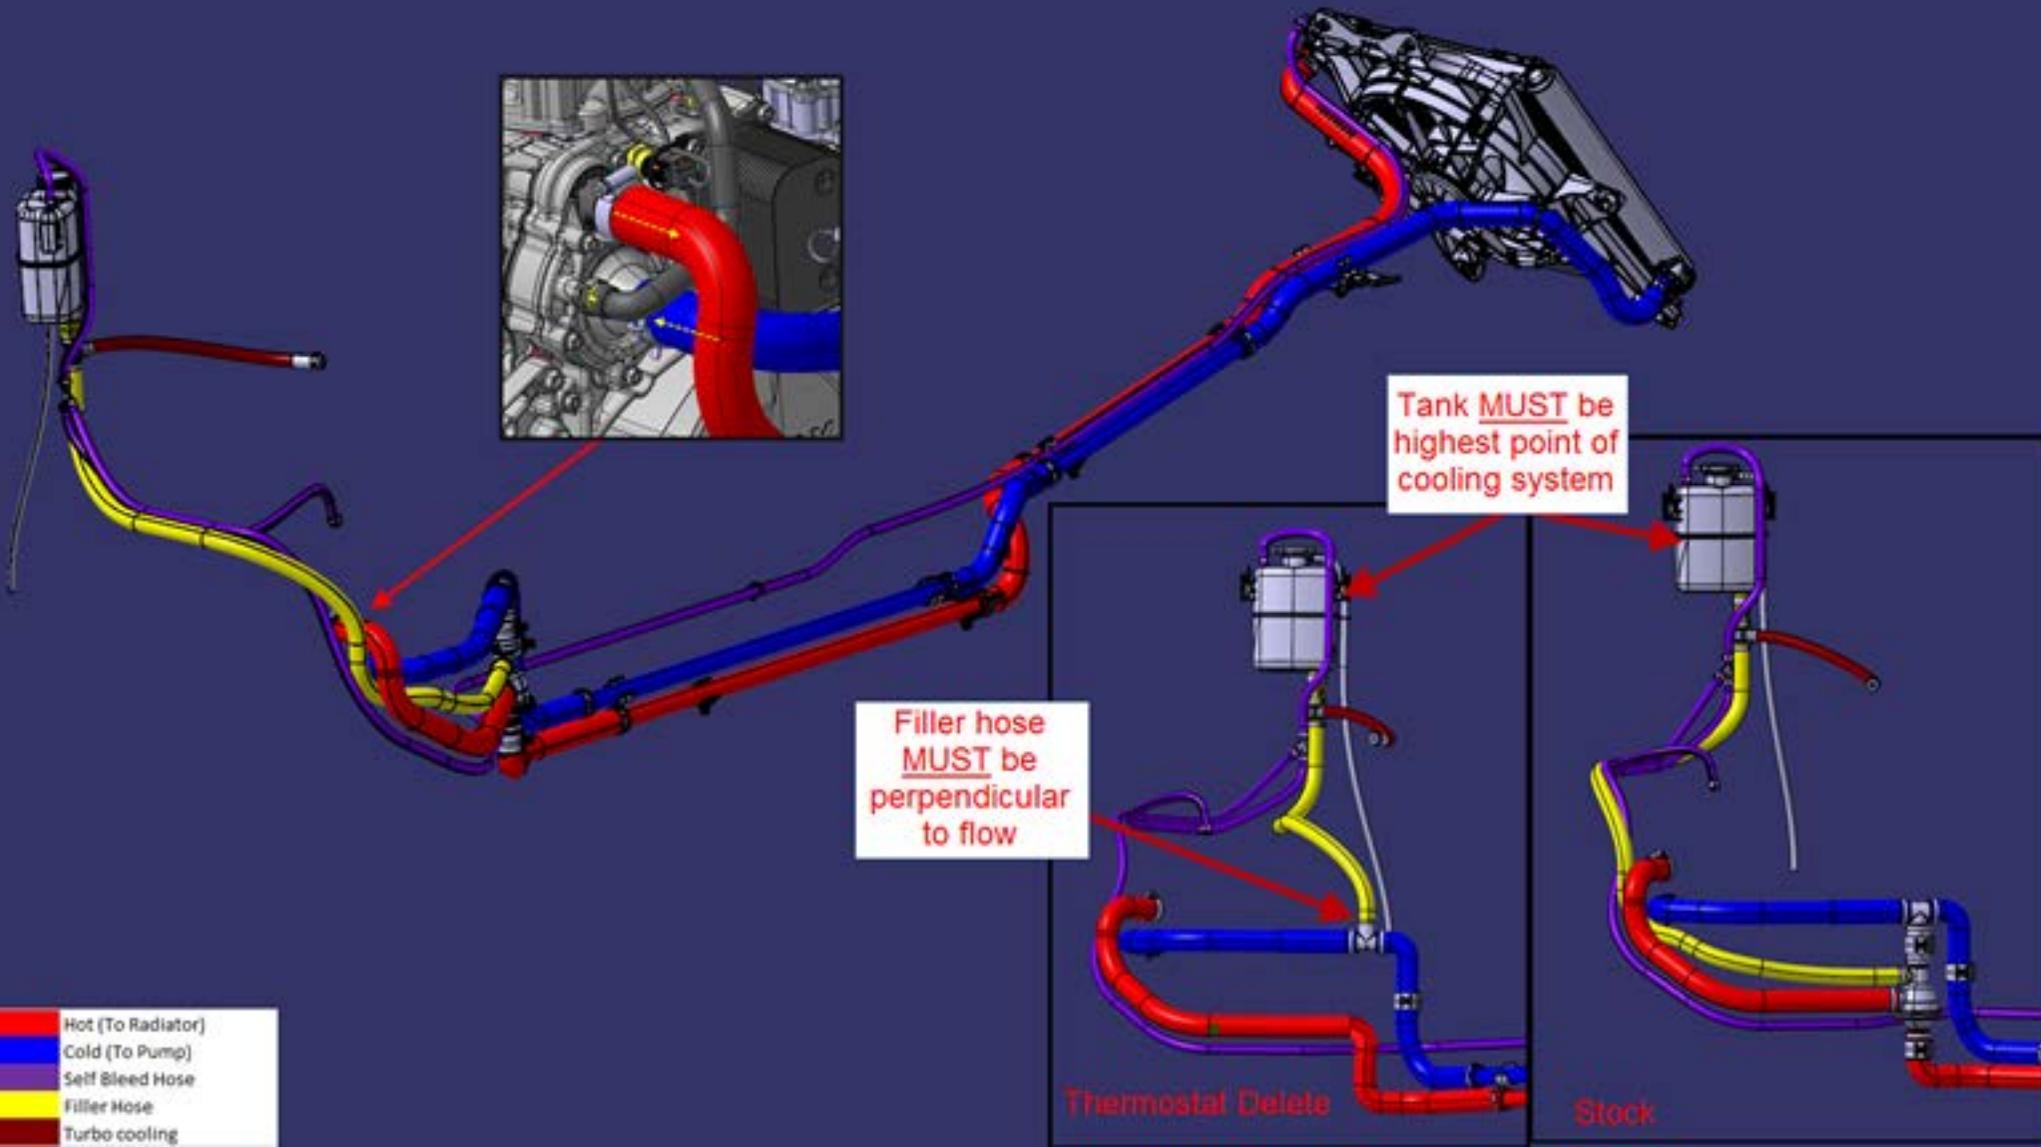

Tank MUST be highest point of cooling system

Filler hose MUST be perpendicular to flow

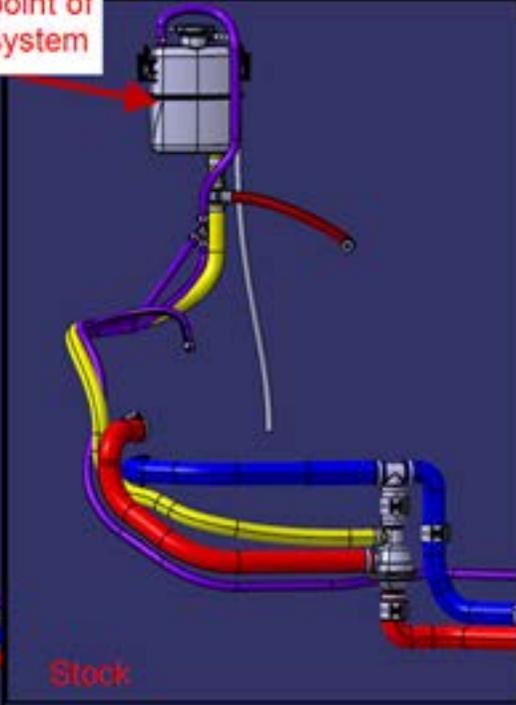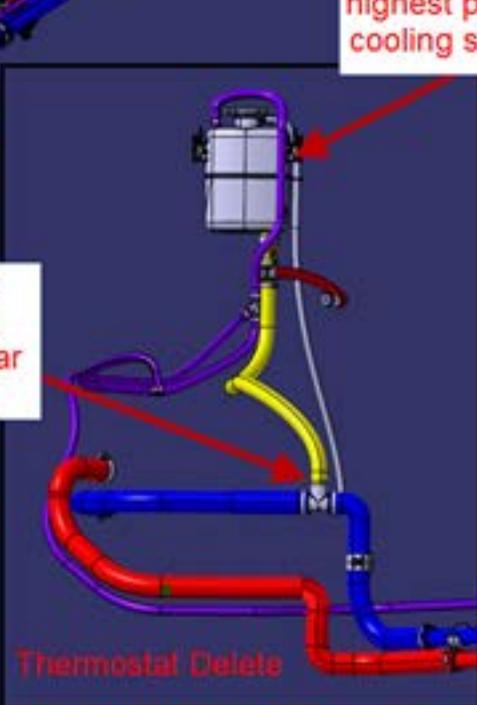

- Hot (To Radiator)
- Cold (To Pump)
- Self Bleed Hose
- Filler Hose
- Turbo cooling

Thermostat Delete

Stock